





29 1 1 1 1 1

30 1 1 1 1 1

31 2

32 1 1 1 1 1

33 2

34 1 1 1 1 1

35 1 1 2 2

36 1 1 2 2

37 1 1 2

38 2 2 2 2 1 2 1

39 2 2 4

40 4 8 2 2

41 6 2

42 2 6 1 2

43 4 3

44 4 2

45

46

47

48

Esquema para pasos 47 y 48

ⓘ Importante para su funcionamiento! Los ejes de las patas A y B deben insertarse exclusivamente en los agujeros de las llantas indicados en este esquema.